

# OWNER'S MANUAL

With the handy Gecko Gauge, one person can install siding quickly while ensuring each course stays level. It will help you produce a consistent siding reveal, and reduce the need for time consuming layout.

1. Attach the first gauge about 1/3 of the board's length from the end of the board. With the handle in the back position (a), slide rear of Gecko Gauge under the bottom edge of the last row of siding installed. (b) Push handle forward to hold gauge in position. (c)

2. Attach the second gauge as in step one in a position about 2/3 of the distance to the end of the board.


3. Set the next piece of siding (d) into the slots at the top of the gauge (e). With the new piece of siding firmly in position on the two gauges, nail the siding in place. Detach the gauges, move them up, and attach them to the board you just nailed in place.

## Maintenance:








When replacing the shoulder bolts (item # 3 in the Parts Section below), **DO NOT OVER-TIGHTEN THE SHOULDER BOLTS**. Hand-tighten them and wrench-tighten only one quarter turn.

# GECKO GAUGE

## FIBER-CEMENT SIDING GAUGE

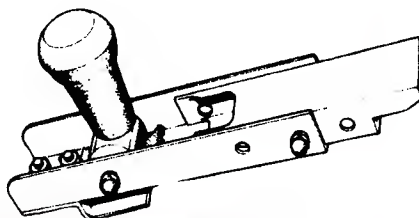

SIDING WIDTH	GAUGE SETTING
6-1/4"	5"
7-1/4"	6"
8-1/4"	7"
9-1/4"	8"

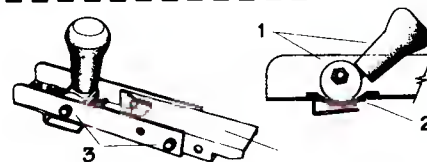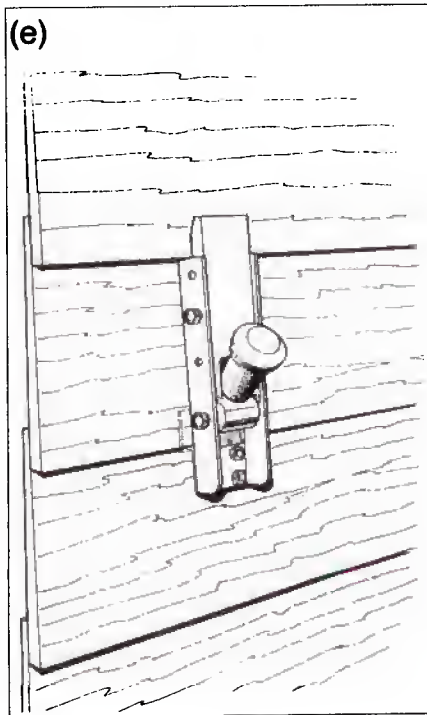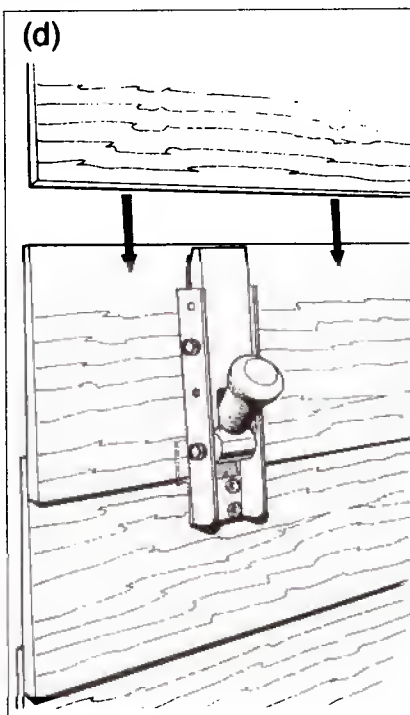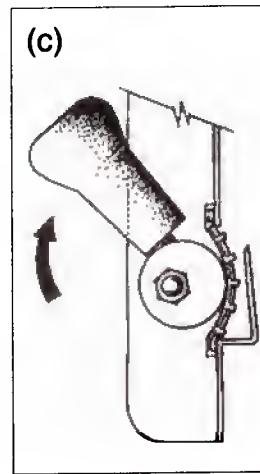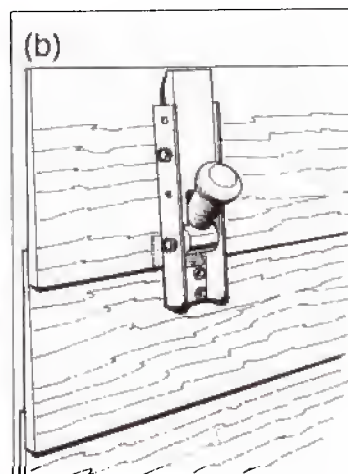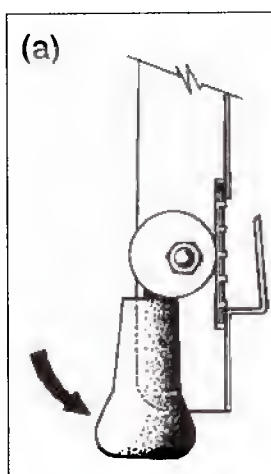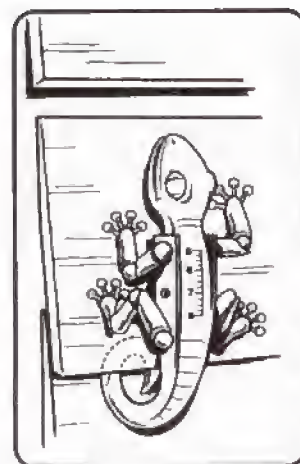

## GECKO GAUGE PARTS

ITEM#	PART #	DESCRIPTION
1	90215	CAM ASSEMBLY (CAM, STUD, AND HANDLE)
2	90206	RUBBER PAD
3	90216	BOLT ASSEMBLY (SHOULDER BOLT, NUT, AND WASHER)

Order Number: 800-297-7487



PACIFIC INTERNATIONAL TOOL & SHEAR  
26130 Bond Road N.E. Kingston, WA 98346  
sales@snappershear.com www.snappershear.com  
Phone: 800-297-7487, Fax: 360-297-8755